

## HONDA TRX700XX BAR CLAMPS

### BAR CLAMP REPLACEMENT TIPS:

- Stock indicator lights: Carefully remove the colored plastic caps with a small screwdriver, then push the rubber boot down through the hole. To install the rubber boots into the TrailTech clamp, apply a bead of water or alcohol for lubrication.
- Stem Cover: On the steering stem, there are 2 welded wire tabs (See photo below.) The tabs will either need to be removed, or the stem cover will need to be modified to fit over the tabs. To remove the tabs, bend them off with a pair of pliers, then use a grinder to remove any sharp edges.



REMOVING WELDED WIRE TABS  
HONDA TRX700XX



BAR CLAMP, X-BARS, AND VAPOR PROTECTOR  
INSTALLED ON HONDA TRX700XX

- Bar Clamp: Install the stem cover first. Next, attach lower portion of the Trail Tech bar clamp to the steering stem. Place 1 1/8" bars in the cradle and secure with TrailTech top clamp. Some controls may need to be placed on the bars *before* the bar is installed.




**TIP:** TORQUE VALUES:  
Use OEM torque specs when attaching clamps to the steering stem. The four top clamp bolts should be torqued to **20 ft. lbs.**

### IF ALSO INSTALLING A TRAIL TECH SPEEDOMETER:



TRAIL TECH SPEEDOMETER TEMPERATURE SENSOR  
INSTALLED ON HONDA TRX700XX

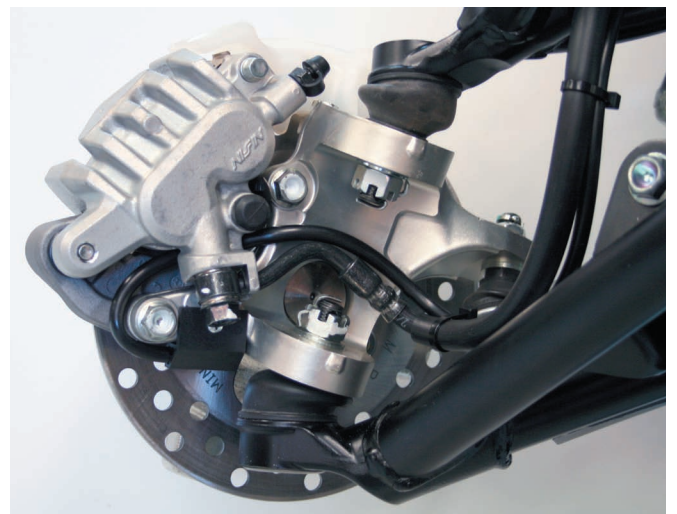

TRAIL TECH SPEEDOMETER SPEED SENSOR  
INSTALLED ON HONDA TRX700XX