

## TRAIL TECH LIGHTS + FULLBORE HOODSKIN TRX450R



### CONTENTS

- FullBore Hoodskin
- (2) Trail Tech MR16 Lights, one spot, one flood
- (2) Machine Screws
- (2) Washers
- (2) Plastic Push-locks
- Installation instructions

### INSTALLATION NOTES


1. Remove center hood cover.
2. Remove stock light assembly entirely, including headlights and black plastic tray.
3. Install Trail Tech mounting plate and lights. *See pictures to right.*
4. Follow wiring instruction sheet to wire into stock lighting harness.
5. Remove the two upper bolts mounting body plastic to gas tank.
6. Lay hoodskin in place and reinstall the 2 bolts removed in step 5.
7. Press hoodskin down around headlight area as the hoodskin helps narrow up the front end. Making sure it's positioned and seated properly. Use the pre-drilled holes as a guide to drill a 1/4" hole on each side.
8. Install push-locks into drilled holes.
9. Optional: Trim hoodskin to scribe line in front to flush out nose with stock plastic.



MOUNTING PLATE INSTALLED



FINISHED INSTALLATION

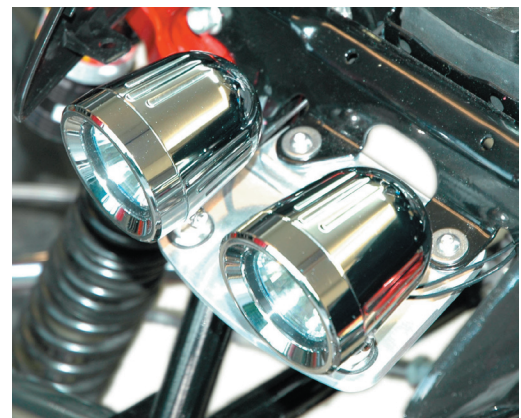

MOUNTING PLATE INSTALLED

#### LIMITED WARRANTY

TRAILTECH INC. WARRANTS TRAIL TECH PRODUCTS TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE AND IF PROPERLY INSTALLED FOR A PERIOD OF SIX MONTHS FROM DATE OF PURCHASE. IF FOUND TO BE DEFECTIVE AS MENTIONED ABOVE, IT WILL BE REPLACED OR REPAIRED. THIS SHALL CONSTITUTE THE SOLE REMEDY OF THE PURCHASER AND THE SOLE LIABILITY OF TRAILTECH INC. TO THE EXTENT PERMITTED BY LAW, THE FOREGOING IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATIONS WHETHER EXPRESSED OR IMPLIED, INCLUDED ANY LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS. IN NO EVENT SHALL TRAILTECH INC. BE LIABLE FOR SPECIAL OR CONSEQUENTIAL DAMAGES.