


12V KEY SWITCH TO CDI POWER TAP FOR YFZ450

1: DISCONNECT STATOR:

Locate and disconnect the dual wire connector coming from stator. (Houses a white wire and a yellow wire and connects to a white wire with black tracer and a yellow wire with a red tracer) See pic below

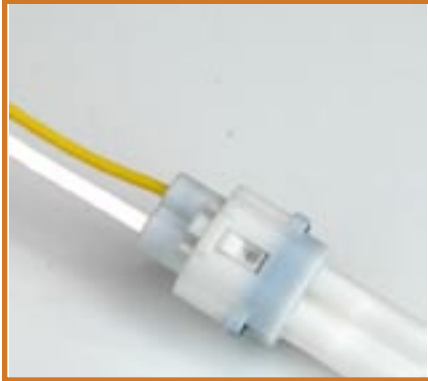


2: RELEASE WHITE WIRE:

Using a razor blade or small pick, depress the tab inside the connector which holds the white wire in place. Once free, pull white wire out of the back of the connector. See pic below



3: INSERT RED WIRE:

Insert the terminal end of Trail Tech jumper into the back of the connector where the white wire was. You will hear a click when the terminal locks in place.

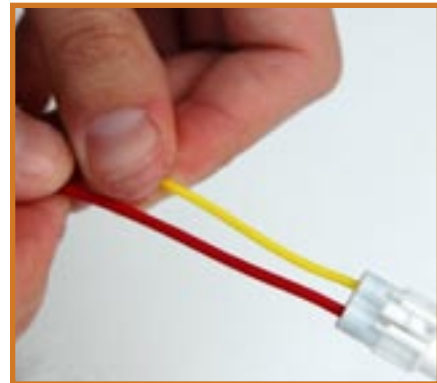

4: TAP INTO POWER:

Locate solid brown wire coming from key switch bundle. Use black power tap to bite into and over the brown wire. This will provide 12V constant power to the CDI as soon as the key is turned on.

