

KTM EXHAUST FLANGE PROTECTOR


2008-2009 2-STROKE 250/300 SX/XC/XC-W
2006-2007 2-STROKE 250/300 SX/XC/XC-W/EXC
2004-2005 2-STROKE 250/300 SX/MXC/EXC

INSTALL NOTES:

!! IMPORTANT: WEAR EYE PROTECTION WHEN HANGING SPRINGS !!

The EFP protects the KTM exhaust flange from damage should the exhaust pipe receive an impact.

[1] Flange Protector, [2] M6x40 Bolts, [1] M6x12 Bolt

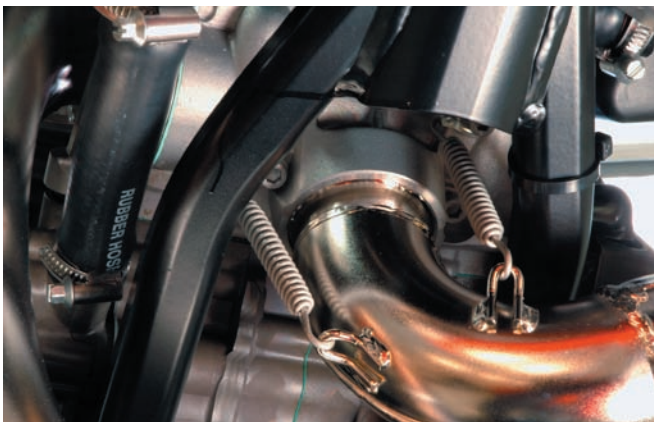


*Exhaust flange before any modifications.
(2009 KTM 300 XCW model pictured.)*



Exhaust system removed.

1. Removal of exhaust system:
 - A. Remove springs and spring hanger tab.
 - B. Remove the exhaust pipe.
 - C. Remove the 2 flange bolts (bolts only.)
2. Clean everything in the header and the exhaust port area. If present, remove old thread locking compound (use a small amount of heat or a wire brush to remove thread locking compound.)

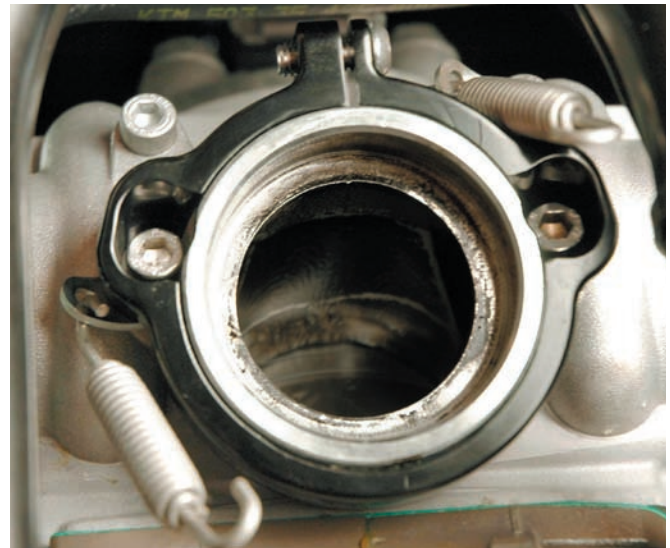

Flange protector, slowly "seated."

3. Next, "seat" the flange protector and start working in the two M6x40 bolts (use thread locking compound.) The spring hanger tab must be sandwiched precisely as shown above. Snug the long bolts, then loosen them a little and add the M6x10 bolt. Slowly tighten the three bolts until the flange protector is seated properly. A misaligned flanged protector will not offer protection. The protector should be parallel to the face of the flange, with the face of the flange raised slightly.

4. Install exhaust pipe. There is a green O-ring gasket on the end of the exhaust pipe; replace it if it becomes cracked or torn. **WEAR EYE PROTECTION WHEN HANGING SPRINGS.**



Finished installation.